

## Planar Combination Antenna K60ZYW\_WP

GSM 850/900/1800/1900 MHz + UMTS + WLAN 5300 MHz      Window Mount



- Including 868 MHz – services and DECT
- Adhesive bonding antenna waterproof IP68, appropriate to mount the antenna outside
- No changes and modifications on the body
- Our products are RoHS- and REACH-conform



## Technical Data

### GSM

Frequency Range	850/900/1800/1900 + 2100 MHz
VSWR*	< 2.0 typ.
Peak Gain*	-1 dBi typ. (900 MHz) +2 dBi typ. (1800 MHz) +2 dBi typ. (2100 MHz)
Power max.	10 W
Diagnostic resistor	10 kΩ (others on request)


### WLAN

Frequency Range	5300 MHz
VSWR*	< 2.0 typ.
Peak Gain*	+1 dBi typ.
Power max.	10 W


\* Measured with 0.6m cable on 30x30cm glass pane

## Mechanical Data

Dimensions (ØxH)	ca. 70 mm x 15 mm
Temperature Range	-40°C to +85°C (operating temperature)
Connection (Standard)	ca. 3m connecting cable RG174 with GSM/FME(f); ca. 3m connecting cable RG174 low loss with WLAN/SMA(m) Other cablelengths and connectors see ordering example and connector list in Internet

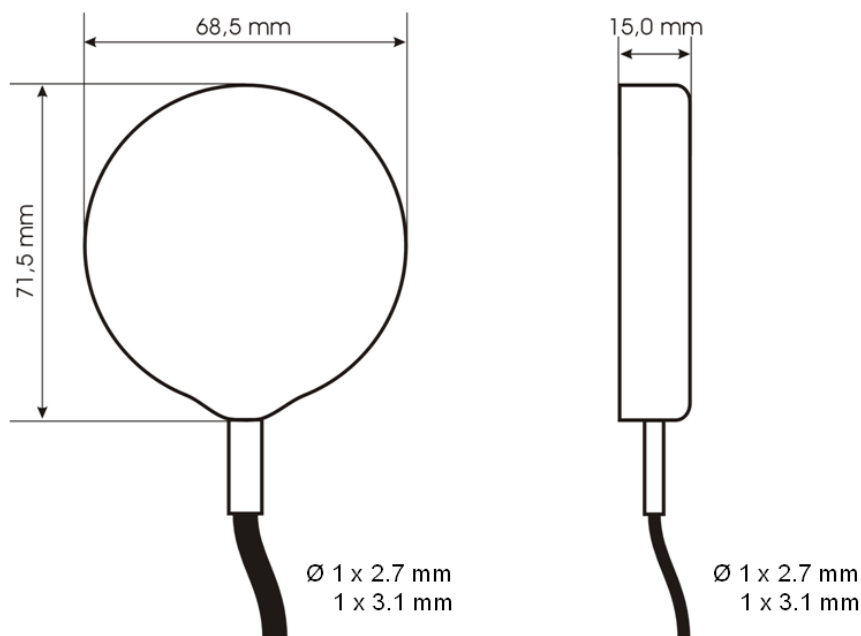


**Radiation diagram (typ.)\***

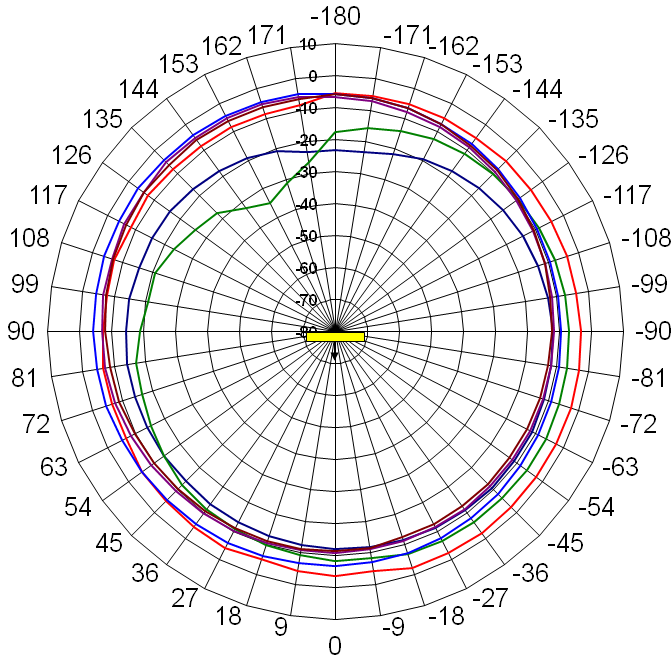

**GSM 900 MHz**  
Peak Gain: -1 dBi

- 820
- 848
- 876
- 904
- 932
- 960

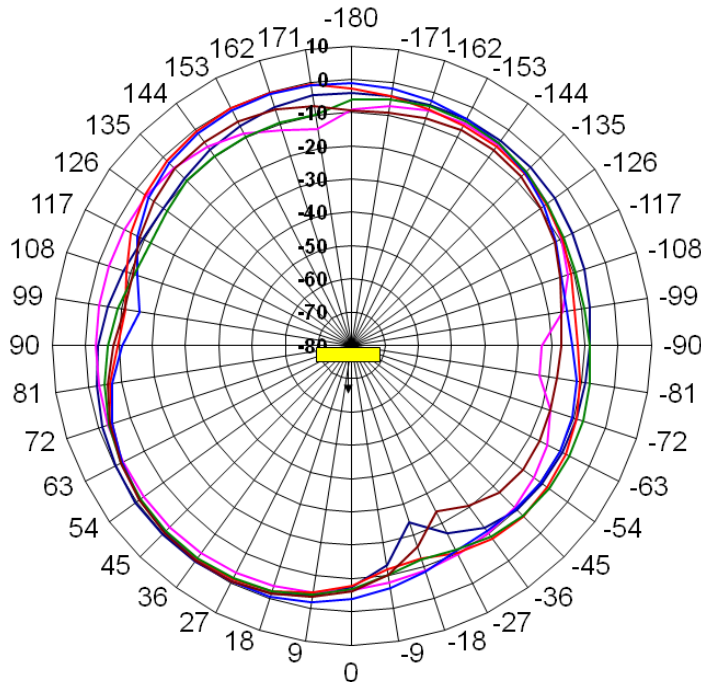


**GSM 1800 MHz**  
Peak Gain: +2 dBi

- 1710
- 1788
- 1866
- 1944
- 2022
- 2100

**GSM 2100 MHz**  
Peak Gain: +2 dBi

\* Measured with 0.6m cable on 30x30cm glass pane

**Radiation diagram (typ.)\***

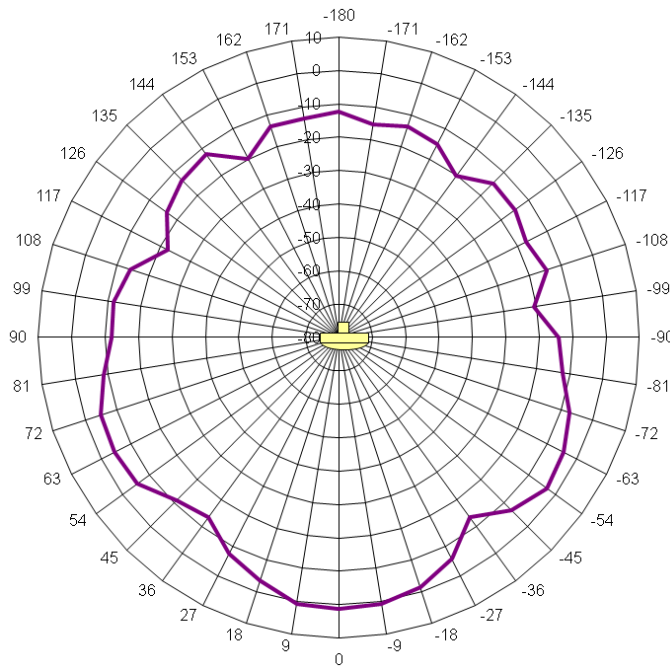

WLAN 5300 MHz  
Peak Gain: +1 dBi

\* Measured with 0.6m cable on 30x30cm ground plane


## Mounting Instructions

- To avoid mechanical stress the antenna should not be attached on doors or flaps.
- No extra ground planes are necessary for this antenna (ground plane inside).
- The Operation of the antenna is only guaranteed by installation with the delivered sticker.
- Mountable on all clean, smooth and stainless surfaces.
- Mountable on glass and non-metallic materials.
- Don't stick the antenna under +10°C to get an optimal adhesion of the sticker.
- Clean seating nonfat before sticking by using the delivered cleaning cloth.
- First remove protection foil on one side of the sticker and stick it on the seating, avoid formation of bubbles.
- Now the other protection foil has to be removed from the sticker. Stick the antenna on with it's level side and advantage direction (cable pointing below) and apply sufficient pressure.

**Delivery includes:** Sticker; cleaning cloth with isopropanol

**Important:** Before sticking please test the adhesive bonding possibility of the material!

## Ordering example

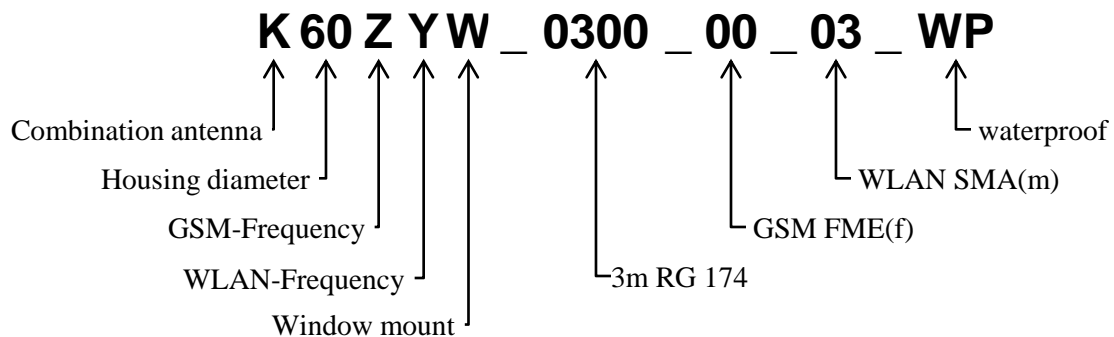

## Warranty

The lawful warranty conditions apply.