



Features

- Voltage rating up to 250VAC
- Current rating up to 1.0 amp
- Compact design and low profile
- Optional cable lengths

Applications

- Water and fuel storage tanks
- Full and/or empty detection
- Pump on/off controls
- Marine bilge and ballast tanks
- Flood detection and prevention
- Coolant level indication
- · Livestock watering tanks
- Irrigation systems
- Water treatment plants
- Waste water tanks
- · Chemical storage and processing

COMPACT VERTICAL LIQUID LEVEL SWITCHES

VCS Series

High- or low-level switching N.O. or N.C. SPST output Can be mounted in the bottom or top of a tank Certified reed switch (UL component listed) Choice of several non-reactive wetted materials 18 different configurations available

The VCS series of point liquid level switches demonstrates a high degree of reliability due to the use of non-reactive wetted components and a unique reed switch designed specifically for level sensing applications. The sensor utilizes a moving float with an embedded magnet to activate a reed switch located in the sensor stem. As the liquid level passes the sensor, the float moves up or down on the stem giving a normally closed or normally open switch indication.

The reliability of this sensor results from a very simple operating principle, a single moving part, media compatible wetted materials, and a unique reed switch design that has a UL recognized component certification.

The sensor mounts into the top or bottom of a liquid storage tank from the inside (internal fitting) using either a 1/8" NPT or M8 x 1.25 threaded fitting. The output is a simple N.O. or N.C. SPST reed switch that utilizes Ruthenium contact points for reliability. Changing from a N.O contact to a N.C. output is done by removing the float, inverting it and re-attaching. This change can be done in the field. Electrical outputs are a single pair of wires with PVC insulation and optional lengths of 100 mm or 600 mm.

CLICK HERE > CONNECT WITH A SPECIALIST

Absolute Maximum Ratings (1)

Parameter	Symbol	Min	Мах	Units	Notes/Conditions
Contact voltage	Vcontact		250 100	VAC VDC	Do not exceed the
					maximum wattage rating for each model
Contact current	Icontact		1.0	Amp	number
Operating temperature		0	70	°C	
Storage temperature		-30	110	°C	
Fitting pressure		-1	4	Bar	Internal tank pressure

⁽¹⁾ Maximum limits the device will withstand without damage

Material and Mounting Options

Model Number	Housing Stem Material				Float	Mounting			
	Glass filled Polypropylene	Glass filled Nylon 6.6	PVDF	Foam Polypropylene	Glass filled Polypropylene	Glass filled Nylon 6.6	Sdd	1/8" NPT	M8 x 1.25
VCS-01	•			•				•	
VCS-02	•			•					•
VCS-03	•				•			•	
VCS-04	•				•				•
VCS-05		•				•		•	
VCS-06		•				•			•
VCS-07			٠				٠	٠	
VCS-08			•				•		•
VCS-13	•			•				•	
VCS-14	•			•					•

Electrical and Temperature Specifications

Model Number	Ma	aximur Capad	n Swit city ⁽¹⁾	ch	Operating Temperature (°C)			
	250 VAC 100 VDC	1.0 A	15 W	50 W	Minimum (0°C)	Maximum (70°C)	Maximum (110°C)	
VCS-01	•	٠	•		•	•		
VCS-02	•	٠	•		•	•		
VCS-03	•	٠	•		•	•		
VCS-04	•	•	•		•	•		
VCS-05	•	٠		•	•	٠		
VCS-06	•	•		•	•	•		
VCS-07	•	٠	•		•		•	
VCS-08	•	•	•		•		•	
VCS-13	•	٠	•		•	٠		
VCS-14	•	•	•		•	•		

⁽¹⁾ Ensure that application of voltages and currents do not exceed total power rating (W)

Environmental Specifications


(Unless otherwise specified, all parameters are measured at 25°C)

Parameter	Min	Тур	Мах	Units	Notes/Conditions
Ambient humidity	0		95	%RH	Non-condensing
Ingress protection			Wetted surfaces Non-wetted Surfaces		

Compliance

UL Recognized Component File - E153493 (Reed switch only)


Mechanical Dimensions

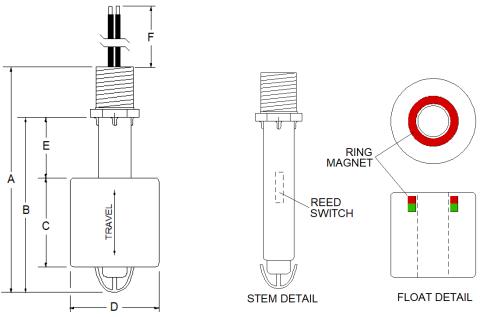

Model Number		[Dimensions	Mounting Config.		Wire Length				
	Overall Length (A)	Interior Length (B)	Float Length Max (C)	Float Diameter Max (D)		Travel Length Nom. (E)			Dim. (F)	
	59 (2.32)	45 (1.77)	22 (0.87)	22 (0.87)	30 (1.18)	15 (0.59)	1/8" NPT	M8 x 1.25	100 (3.94)	600 (23.6)
VCS-01	•	٠	•		•	٠	•		•	
VCS-02	•	•	•	•		•		•	•	
VCS-03	•	•	•		•	•	•		•	
VCS-04	•	•	•	•		•		•	•	
VCS-05	•	•	•	•		•	•		•	
VCS-06	•	•	•	•		•		•	•	
VCS-07	•	•	•	•		•	•		•	
VCS-08	•	•	•	•		•		٠	•	
VCS-13	•	•	•		•	•	•			•
VCS-14	•	•	•	•		•		•		•


Application Information

The versatile design of the VCS series level sensor provides four different mounting and operating modes. The sensor can mount at either the top or bottom of a liquid storage tank. In either position, the float can be oriented to provide a N.O. or N.C. contact. Because the magnet is positioned at one end of the float, it can be removed from the stem, turned upside down, and reinstalled to provide any of the four configurations shown below.

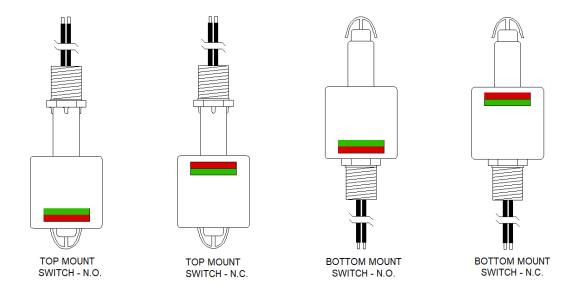

To remove and re-orient the float, gently squeeze the retainer clips at the end of the sensor and slide the float off the stem. Reinstall the float by sliding it back over the stem ensuring that it passes the clips and allows them to return to their original position.

To avoid leaks, especially when mounting at the bottom of a tank, use appropriate sealing techniques around the threaded area. For the 1/8" NPT fitting, wrap PTFE tape on the threads prior to installation. For the M8 x 1.25 fitting, use an O-ring or sealing washer around the threads on the interior of the tank along with a properly sized locking nut on the outside.

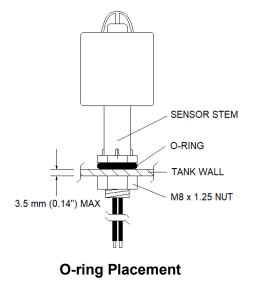

Ordering Information

Model	Part Number
VCS-01*	20017615-01
VCS-02*	20017616-02
VCS-03	83005-000
VCS-04	83012-000
VCS-05*	20017615-05
VCS-06*	20017616-06
VCS-07	83038-000
VCS-08	83039-000
VCS-13	83033-000
VCS-14	83034-000

* Commonly stocked part numbers. Please consult factory for availability.

CLICK HERE > CONNECT WITH A SPECIALIST

NORTH AMERICA Tel +1 800 522 6752 EUROPE Tel +31 73 624 6999 **ASIA** Tel +86 0400 820 6015

te.com/sensors

TE Connectivity, TE, TE Connectivity (logo) and Every Connection Counts are trademarks. All other logos, products and/or company names referred to herein might be trademarks of their respective owners

The information given herein, including drawings, illustrations and schematics which are intended for illustration purposes only, is believed to be reliable. However, TE Connectivity makes no warranties as to its accuracy or completeness and disclaims any liability in connection with its use. TE Connectivity's obligations shall only be as set forth in TE Connectivity's Standard Terms and Conditions of Sale for this product and in no case will TE Connectivity be liable for any incidental, indirect or consequential damages arising out of the sale, resale, use or misuse of the product. Users of TE Connectivity products should make their own evaluation to determine the suitability of each such product for the specific application.

© 2020 TE Connectivity Corporation. All Rights Reserved.

10/2020

