





O2 Gas Sensor in Miniature Housing

## **Key Features**

- · Fast equilibration time
- Long-Life sensor with no consumable parts and lead-free (RoHS compliant)

### **Applications**

- Oxygen Monitoring in Diffusion Mode
- · Continuous Air Quality Monitoring
- Safety and Environmental Control

### <u>Measurement</u>

Operation Principle	3-Electrode Electrochemical
Nominal Range	0 - 30 %
Maximum Overload	100 %
Inboard Filter	-
Output Signal	80 ± 24 μA/%
Resolution (Electronics dependent)	< 500 ppm
T90 Response Time	< 8 s
Typical Baseline Range (pure N2, 20°C)	0.1 %-equivalent
Maximum Zero Shift (+20°C to +40°C)	see Graph
Repeatability	< 2 % of signal
Output Linearity	see MEM2
Gain (Only applies to 4-Electrode sensors)	-

Rev.: Apr-20 Page 1 of 7

Phone: +41 43 311 72 00 Membrapor AG
Fax: +41 43 311 72 01 Birkenweg 2
E-Mail: info@membrapor.ch
Website: www.membrapor.ch
Switzerland

#### Performance data recorded at 20 - 25 °C, 30 - 50% RH, 900 - 1100 mbar







### **Electrical**

Rec. Load Resistor	10 - 33 Ω
Bias (V_Sens-V_Ref)	-600 mV
Conformity to RoHS directive	RoHS Compliance

## **Environmental**

Relative Humidity Range	15 % to 90 % RH non-condensing
Temperature Range	-40 °C to 50 °C
Pressure Range	Atmospheric ± 10%
Pressure Coefficient	N.D.
Humidity Effect	None

### **Lifetime**

Expected Operation Life	3 years in air
Expected Long Term Output Drift in air	< 4% signal per 3 years
Filter Life	
Storage Life	6 months in container
Rec. Storage Temperature	5°C - 20°C
Warranty Period	12 months from date of dispatch

Rev.: Apr-20 Page 2 of 7

Phone: +41 43 311 72 00 Membrapor AG
Fax: +41 43 311 72 01 Birkenweg 2
E-Mail: info@membrapor.ch
Website: www.membrapor.ch
Switzerland

### Performance data recorded at 20 - 25 °C, 30 - 50% RH, 900 - 1100 mbar








#### Miniature-Size Outline Dimensions

BOTTOM VIEW SIDE VIEW

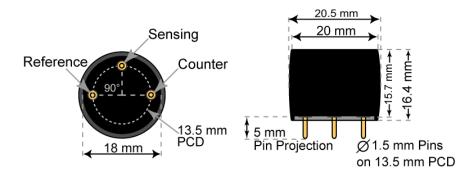

± 0.10 mm

## **Mechanical**

Weight 5.5 g

Orientation Any

Housing material Polycarbonate

Rev.: Apr-20 Page 3 of 7

Phone: +41 43 311 72 00 Membrapor AG
Fax: +41 43 311 72 01 Birkenweg 2
E-Mail: info@membrapor.ch
Website: www.membrapor.ch
Switzerland

### Performance data recorded at 20 - 25 °C, 30 - 50% RH, 900 - 1100 mbar







### **Cross Sensitivity Data**

The table below does not claim to be complete. Interfering gases should not be used for calibration. Please contact Membrapor AG for further support regarding cross sensitivities.

Interfering Gas	Concentration [ppm]	Reading [%]
$C_2H_4$	1000	0
CO	2000	0.05
$H_2$	1000	0.1
H₂S	500	-0.02
SO <sub>2</sub>	200	-0.01

## **Important Application Notes**

• Conversion factor: 10000 ppm = 1%

Rev.: Apr-20 Page 4 of 7

Phone: +41 43 311 72 00 Membrapor AG
Fax: +41 43 311 72 01 Birkenweg 2
E-Mail: info@membrapor.ch
Website: www.membrapor.ch
Switzerland

### Performance data recorded at 20 - 25 °C, 30 - 50% RH, 900 - 1100 mbar








### **Temperature dependence**

The output of an electrochemical sensor varies with temperature. The graphs below show the temperature-dependent variation of baseline and sensitivity, respectively. The results shown here are raw data (batch average) without any post-processing steps. The sensitivity and baseline are referenced to the signal at 20°C (reference point).

Please note: It is highly recommended to acquire the temperature dependence curves with the whole instrument. The sampling system, the humidity, the electronics and the interaction between the electronics and the sensor have a significant impact on the temperature dependence of the final measurement reading.

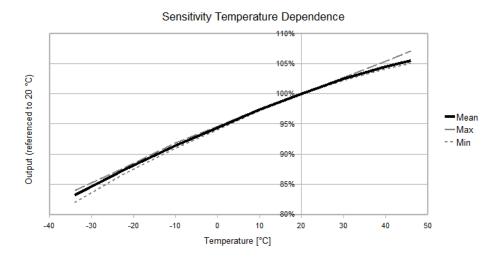

Baseline shifted with respect to reference point at 20°C.

Rev.: Apr-20 Page 5 of 7

Phone: +41 43 311 72 00 Fax: +41 43 311 72 01 E-Mail: info@membrapor.ch Website: www.membrapor.ch Membrapor AG Birkenweg 2 CH-8304 Wallisellen Switzerland

### Performance data recorded at 20 - 25 °C, 30 - 50% RH, 900 - 1100 mbar








### **Linearity and resolution**

#### **Output Signal vs Concentration**

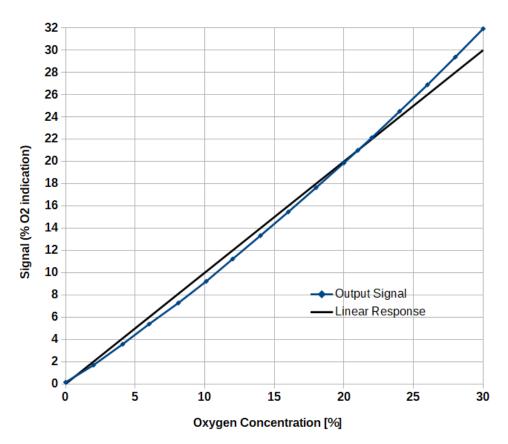

Linearity of sensor.

Rev.: Apr-20 Page 6 of 7


Phone: +41 43 311 72 00 Fax: +41 43 311 72 01 E-Mail: info@membrapor.ch Website: www.membrapor.ch Membrapor AG Birkenweg 2 CH-8304 Wallisellen Switzerland

### Performance data recorded at 20 - 25 °C, 30 - 50% RH, 900 - 1100 mbar





# **Specification Sheet**

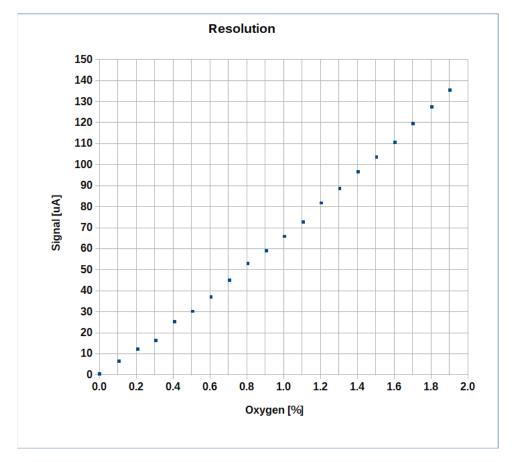

Resolution of sensor.

Rev.: Apr-20 Page 7 of 7

Phone: +41 43 311 72 00 Fax: +41 43 311 72 01 E-Mail: info@membrapor.ch Website: www.membrapor.ch Membrapor AG Birkenweg 2 CH-8304 Wallisellen Switzerland

### Performance data recorded at 20 - 25 °C, 30 - 50% RH, 900 - 1100 mbar