





Membrapor AG

Birkenweg 2

Switzerland

Chlorine Gas Sensor Cl2/M-20

Cl2 Gas Sensor in Miniature Housing

Key Features

• Highly sensitive Cl2 measurement

Applications

- Continuous Air Quality Monitoring
- · Safety and Environmental Control
- For Portable Gas Detectors

<u>Measurement</u>

Operation Principle	3-Electrode Electrochemical	
· ·		
Nominal Range	0 - 20 ppm	
Maximum Overload	200 ppm	
Inboard Filter	-	
Output Signal	- 600 ± 150 nA/ppm	
Resolution (Electronics dependent)	< 0.1 ppm	
T80 Response Time	< 60 s	
Typical Baseline Range (pure air, 20°C)	-0.1 ppm to 0.2 ppm	
Maximum Zero Shift (+20°C to +40°C)	see Graph	
Repeatability	< 2 % of signal	
Output Linearity	Linear	
Gain (Only applies to 4-Electrode sensors)	-	

Rev.: Jul-20 Page 1 of 6

Phone: +41 43 311 72 00 Fax: +41 43 311 72 01 E-Mail: info@membrapor.ch CH-8304 Wallisellen Website: www.membrapor.ch

Performance data recorded at 20 - 25 °C, 30 - 50% RH, 900 - 1100 mbar







Electrical

Rec. Load Resistor	10 - 33 Ω
Bias (V_Sens-V_Ref)	not recommended
Conformity to RoHS directive	RoHS Compliance

Environmental

Relative Humidity Range	15 % to 90 % RH non-condensing	
Temperature Range	-40 °C to 50 °C	
Pressure Range	Atmospheric ± 10%	
Pressure Coefficient	N.D.	
Humidity Effect	None	

Lifetime

Expected Operation Life	2 years in air
Expected Long Term Output Drift in air	< 2 % signal loss per month
Filter Life	
Storage Life	6 months in container
Rec. Storage Temperature	5°C - 20°C
Warranty Period	12 months from date of dispatch

Rev.: Jul-20 Page 2 of 6

Phone: +41 43 311 72 00 Membrapor AG
Fax: +41 43 311 72 01 Birkenweg 2
E-Mail: info@membrapor.ch
Website: www.membrapor.ch
Switzerland

Performance data recorded at 20 - 25 °C, 30 - 50% RH, 900 - 1100 mbar








Miniature-Size Outline Dimensions

BOTTOM VIEW SIDE VIEW

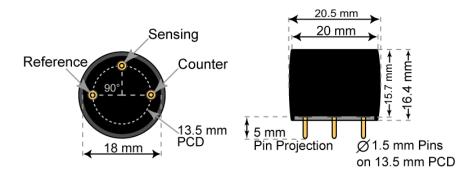

± 0.10 mm

Mechanical

Weight 5.5 g

Orientation Any

Housing material Polycarbonate

Rev.: Jul-20 Page 3 of 6

Phone: +41 43 311 72 00 Membrapor AG
Fax: +41 43 311 72 01 Birkenweg 2
E-Mail: info@membrapor.ch
Website: www.membrapor.ch
Switzerland

Performance data recorded at 20 - 25 °C, 30 - 50% RH, 900 - 1100 mbar







Cross Sensitivity Data

The table below does not claim to be complete. Interfering gases should not be used for calibration. Please contact Membrapor AG for further support regarding cross sensitivities.

$\begin{array}{cccccccccccccccccccccccccccccccccccc$	Interfering Gas	Concentration [ppm]	Reading [ppm]
CH_2O 7 0 CIO_2 3 ~ 3 CO 300 0 Ethanol (C_2H_5OH) 60 0 F_2 8 ~ 8 H_2 100 0 H_2S 20 < -20 HCI 20 0 NH_3 80 0 NO 50 0 NO_2 20 ~ 20	Br ₂	10	2.5
CIO_2 3 ~ 3 CO 300 0 $Ethanol (C_2H_5OH)$ 60 0 F_2 8 ~8 H_2 100 0 H_2S 20 < -20	C_2H_4	100	0
CO 300 0 Ethanol (C ₂ H ₅ OH) 60 0 F_2 8 ~ 8 H_2 100 0 H_2S 20 < -20 HCI 20 0 NH_3 80 0 NO 50 0 NO_2 20 ~ 20	CH ₂ O	7	0
Ethanol (C_2H_5OH) 60 0 F_2 8 ~8 H_2 100 0 H_2S 20 < -20 HCI 20 0 NH ₃ 80 0 NO 50 0 NO ₂ 20 ~ 20	CIO ₂	3	~ 3
$\begin{array}{cccccccccccccccccccccccccccccccccccc$	CO	300	0
H_2 100 0 H_2S 20 < -20 HCI 20 0 NH_3 80 0 NO 50 0 NO_2 20 ~ 20	Ethanol (C₂H₅OH)	60	0
H_2S 20< -20 HCI 200 NH_3 800 NO 500 NO_2 20~ 20	F ₂	8	~8
HCI 20 0 NH ₃ 80 0 NO 50 0 NO ₂ 20 ~ 20	H ₂	100	0
NH3 80 0 NO 50 0 NO2 20 ~ 20	H ₂ S	20	< -20
NO 50 0 NO ₂ 20 ~ 20	HCI	20	0
NO ₂ 20 ~ 20	NH ₃	80	0
	NO	50	0
O ₃ 1 ~ 1	NO_2	20	~ 20
	O_3	1	~ 1
SO ₂ 5 0	SO ₂	5	0

Rev.: Jul-20 Page 4 of 6

Phone: +41 43 311 72 00 Fax: +41 43 311 72 01 E-Mail: info@membrapor.ch Website: www.membrapor.ch Membrapor AG Birkenweg 2 CH-8304 Wallisellen Switzerland

Performance data recorded at 20 - 25 °C, 30 - 50% RH, 900 - 1100 mbar








Temperature dependence

The output of an electrochemical sensor varies with temperature. The graphs below show the temperature-dependent variation of baseline and sensitivity, respectively. The results shown here are raw data (batch average) without any post-processing steps. The sensitivity and baseline are referenced to the signal at 20°C (reference point).

Please note: It is highly recommended to acquire the temperature dependence curves with the whole instrument. The sampling system, the humidity, the electronics and the interaction between the electronics and the sensor have a significant impact on the temperature dependence of the final measurement reading.

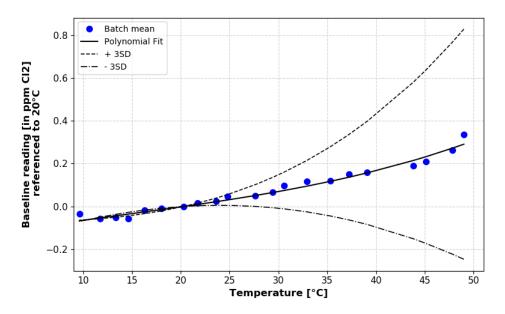

Baseline shifted with respect to reference point at 20°C.

Rev.: Jul-20 Page 5 of 6

Phone: +41 43 311 72 00 Fax: +41 43 311 72 01 E-Mail: info@membrapor.ch Website: www.membrapor.ch Membrapor AG Birkenweg 2 CH-8304 Wallisellen Switzerland


Performance data recorded at 20 - 25 °C, 30 - 50% RH, 900 - 1100 mbar







Sensitivity Temperature Dependence

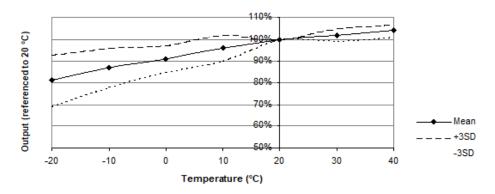

Sensitivity dependence expressed as a percentage of the output signal at reference point at 20 °C.

Rev.: Jul-20 Page 6 of 6

Phone: +41 43 311 72 00 Fax: +41 43 311 72 01 E-Mail: info@membrapor.ch Website: www.membrapor.ch Membrapor AG Birkenweg 2 CH-8304 Wallisellen Switzerland

Performance data recorded at 20 - 25 °C, 30 - 50% RH, 900 - 1100 mbar