

Hydrogen Chloride Gas Sensor HCI/C-1000

HCI Gas Sensor in Compact Housing

Applications

- Discontinuous Measurement
- Safety and Process Control

Measurement

Operation Principle	3-Electrode Electrochemical
Nominal Range	0 - 1000 ppm
Maximum Overload	2000 ppm
Inboard Filter	-
Output Signal	20 ± 7 nA/ppm
Resolution (Electronics dependent)	< 5 ppm
T80 Response Time	< 40 s
Typical Baseline Range (pure air, 20°C)	-25 ppm to 25 ppm
Maximum Zero Shift (+20°C to +40°C)	see Graph
Repeatability	< 2 % of signal
Output Linearity	Linear
Gain (Only applies to 4-Electrode sensors)	-

Rev.: Apr-20

Phone: +41 43 311 72 00 Fax: +41 43 311 72 01 E-Mail: <u>info@membrapor.ch</u> Website: <u>www.membrapor.ch</u> Page 1 of 5

Membrapor AG Birkenweg 2 CH-8304 Wallisellen Switzerland

Performance data recorded at 20 – 25 °C, 30 - 50% RH, 900 - 1100 mbar



Hydrogen Chloride Gas Sensor HCI/C-1000

Electrical

Rec. Load Resistor	10 - 33 Ω
Bias (V_Sens-V_Ref)	not recommended
Conformity to RoHS directive	RoHS Compliance

Environmental

Relative Humidity Range	15 % to 90 % RH non-condensing
Temperature Range	-20 °C to 50 °C
Pressure Range	Atmospheric ± 10%
Pressure Coefficient	N.D.
Humidity Effect ¹⁾	None

1) Abrupt changes in rel. Humidity causes a short-term transient signal.

Lifetime

Expected Operation Life	2 years in air
Expected Long Term Output Drift in air	< 2 % signal loss per month
Filter Life	
Storage Life	6 months in container
Rec. Storage Temperature	5°C - 20°C
Warranty Period	12 months from date of dispatch

Rev.: Apr-20

Phone: +41 43 311 72 00 Fax: +41 43 311 72 01 E-Mail: <u>info@membrapor.ch</u> Website: <u>www.membrapor.ch</u> Page 2 of 5

Membrapor AG Birkenweg 2 CH-8304 Wallisellen Switzerland


Performance data recorded at 20 – 25 °C, 30 - 50% RH, 900 - 1100 mbar






Hydrogen Chloride Gas Sensor HCI/C-1000

Compact-Size Outline Dimensions

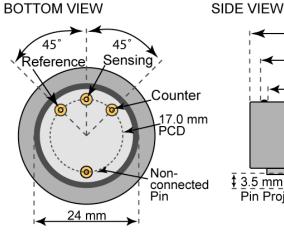

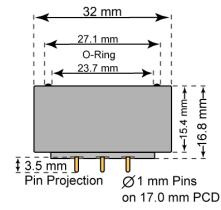

± 0.10 mm

Mechanical

Weight	13 g
Orientation	Any
Housing material	Polycarbonate

Rev.: Apr-20Page 3 of 5Phone: +41 43 311 72 00Membrapor AGFax: +41 43 311 72 01Birkenweg 2E-Mail: info@membrapor.chCH-8304 WallisellenWebsite: www.membrapor.chSwitzerlandPerformance data recorded at 20 – 25 °C, 30 - 50% RH, 900 - 1100 mbar



Hydrogen Chloride Gas Sensor HCI/C-1000

Cross Sensitivity Data

The table below does not claim to be complete. Interfering gases should not be used for calibration. Please contact Membrapor AG for further support regarding cross sensitivities.

Interfering Gas	Cross-Sens. [%]
C_2H_4	0
Cl ₂	~ -1
CO	0
Ethanol (C ₂ H ₅ OH)	< 1
H ₂ S	150
HBr	50
NO	0
NO ₂	-30
SO ₂	0

Rev.: Apr-20	Page 4 of 5
Phone: +41 43 311 72 00	Membrapor AG
Fax: +41 43 311 72 01	Birkenweg 2
E-Mail: <u>info@membrapor.ch</u>	CH-8304 Wallisellen
Website: <u>www.membrapor.ch</u>	Switzerland

Performance data recorded at 20 – 25 °C, 30 - 50% RH, 900 - 1100 mbar




Hydrogen Chloride Gas Sensor HCI/C-1000

Temperature dependence

The output of an electrochemical sensor varies with temperature. The graphs below show the temperature-dependent variation of baseline and sensitivity, respectively. The results shown here are raw data (batch average) without any post-processing steps. The sensitivity and baseline are referenced to the signal at 20°C (reference point).

Please note: It is highly recommended to acquire the temperature dependence curves with the whole instrument. The sampling system, the humidity, the electronics and the interaction between the electronics and the sensor have a significant impact on the temperature dependence of the final measurement reading.

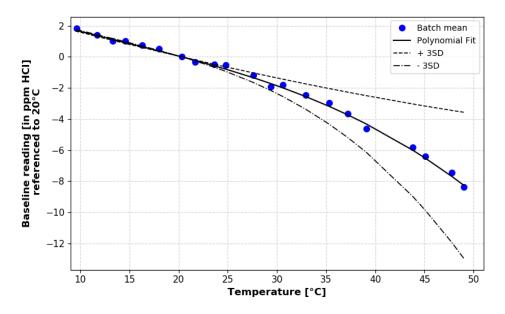

Baseline shifted with respect to reference point at 20°C.

Rev.: Apr-20

Phone: +41 43 311 72 00 Fax: +41 43 311 72 01 E-Mail: <u>info@membrapor.ch</u> Website: <u>www.membrapor.ch</u> Page 5 of 5

Membrapor AG Birkenweg 2 CH-8304 Wallisellen Switzerland

Performance data recorded at 20 – 25 °C, 30 - 50% RH, 900 - 1100 mbar