

Specification Sheet



Membrapor AG

Birkenweg 2

Switzerland

Hydrogen Sulfide Gas Sensor H2S/C-10

H2S Gas Sensor in Compact Housing

Key Features

Highly sensitive H2S measurement

Applications

- · Discontinuous Measurement
- · Air Quality Monitoring
- Medical Applications

Measurement

Operation Principle	3-Electrode Electrochemical	
Nominal Range	0 - 10 ppm	
Maximum Overload	20 ppm	
Inboard Filter	-	
Output Signal	4500 ± 1000 nA/ppm	
Resolution (Electronics dependent)	< 0.01 ppm	
T90 Response Time	< 35 s	
Typical Baseline Range (pure air, 20°C)	-0.1 ppm to 0.1 ppm	
Maximum Zero Shift (+20°C to +40°C)	see Graph	
Repeatability	< 2 % of signal	
Output Linearity	Linear	
Gain (Only applies to 4-Electrode sensors)	-	

Rev.: Apr-20 Page 1 of 5

Phone: +41 43 311 72 00 Fax: +41 43 311 72 01 E-Mail: info@membrapor.ch CH-8304 Wallisellen Website: www.membrapor.ch

Performance data recorded at 20 - 25 °C, 30 - 50% RH, 900 - 1100 mbar

For further information about usage of Membrapor sensors, see application note MEM1. The data contained in this document is for guidance only. Membrapor AG accepts no liability for any consequential losses, injury or damage resulting from the use of this document or from any omissions or errors herein. Customers should test under their own conditions to ensure that the sensors are suitable for their own requirements.



Specification Sheet



Hydrogen Sulfide Gas Sensor H2S/C-10

Electrical

Rec. Load Resistor	10 - 33 Ω
Bias (V_Sens-V_Ref)	not recommended
Conformity to RoHS directive	RoHS Compliance

Environmental

Relative Humidity Range	15 % to 90 % RH non-condensing	
Temperature Range	-40 °C to 50 °C	
Pressure Range	Atmospheric ± 10%	
Pressure Coefficient	N.D.	
Humidity Effect	None	

<u>Lifetime</u>

Expected Operation Life	2 years in air
Expected Long Term Output Drift in air	< 2 % signal loss per month
Filter Life	
Storage Life	6 months in container
Rec. Storage Temperature	5°C - 20°C
Warranty Period	12 months from date of dispatch

Rev.: Apr-20 Page 2 of 5

Phone: +41 43 311 72 00 Membrapor AG
Fax: +41 43 311 72 01 Birkenweg 2
E-Mail: info@membrapor.ch
Website: www.membrapor.ch
Switzerland

Performance data recorded at 20 - 25 °C, 30 - 50% RH, 900 - 1100 mbar

For further information about usage of Membrapor sensors, see application note <u>MEM1</u>. The data contained in this document is for guidance only. Membrapor AG accepts no liability for any consequential losses, injury or damage resulting from the use of this document or from any omissions or errors herein. Customers should test under their own conditions to ensure that the sensors are suitable for their own requirements.




Specification Sheet



Hydrogen Sulfide Gas Sensor H2S/C-10

Compact-Size Outline Dimensions

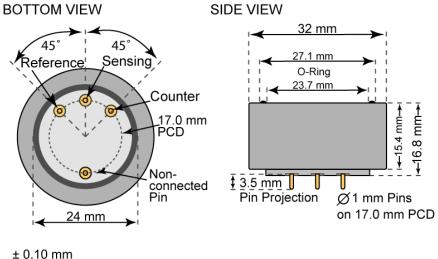

Mechanical

Weight 13 g

Orientation Any

Housing material Polycarbonate

Rev.: Apr-20 Page 3 of 5

Phone: +41 43 311 72 00 Membrapor AG Fax: +41 43 311 72 01 Birkenweg 2 E-Mail: info@membrapor.ch CH-8304 Wallisellen Website: www.membrapor.ch Switzerland

Performance data recorded at 20 - 25 °C, 30 - 50% RH, 900 - 1100 mbar

For further information about usage of Membrapor sensors, see application note MEM1. The data contained in this document is for guidance only. Membrapor AG accepts no liability for any consequential losses, injury or damage resulting from the use of this document or from any omissions or errors herein. Customers should test under their own conditions to ensure that the sensors are suitable for their own requirements.







Hydrogen Sulfide Gas Sensor H2S/C-10

Cross Sensitivity Data

The table below does not claim to be complete. Interfering gases should not be used for calibration. Please contact Membrapor AG for further support regarding cross sensitivities.

Interfering Gas	Concentration [ppm]	Reading [ppm]
CO	200	< 0.5
Methyl Mercaptan (MM, CH₃SH)	10	~ 5
Tert-Butyl Mercaptan (TBM, (CH ₃) ₃ CSH)	10	~ 3.5

Rev.: Apr-20 Page 4 of 5

Phone: +41 43 311 72 00
Fax: +41 43 311 72 01
E-Mail: info@membrapor.ch
Website: www.membrapor.ch

Membrapor AG Birkenweg 2 CH-8304 Wallisellen Switzerland

Performance data recorded at 20 - 25 °C, 30 - 50% RH, 900 - 1100 mbar

For further information about usage of Membrapor sensors, see application note <u>MEM1</u>. The data contained in this document is for guidance only. Membrapor AG accepts no liability for any consequential losses, injury or damage resulting from the use of this document or from any omissions or errors herein. Customers should test under their own conditions to ensure that the sensors are suitable for their own requirements.








Hydrogen Sulfide Gas Sensor H2S/C-10

Temperature dependence

The output of an electrochemical sensor varies with temperature. The graphs below show the temperature-dependent variation of baseline and sensitivity, respectively. The results shown here are raw data (batch average) without any post-processing steps. The sensitivity and baseline are referenced to the signal at 20°C (reference point).

Please note: It is highly recommended to acquire the temperature dependence curves with the whole instrument. The sampling system, the humidity, the electronics and the interaction between the electronics and the sensor have a significant impact on the temperature dependence of the final measurement reading.

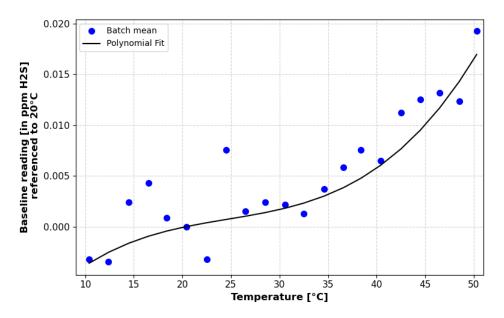

Baseline shifted with respect to reference point at 20°C.

Rev.: Apr-20 Page 5 of 5

Phone: +41 43 311 72 00 Fax: +41 43 311 72 01 E-Mail: info@membrapor.ch Website: www.membrapor.ch Membrapor AG Birkenweg 2 CH-8304 Wallisellen Switzerland

Performance data recorded at 20 - 25 °C, 30 - 50% RH, 900 - 1100 mbar

For further information about usage of Membrapor sensors, see application note <u>MEM1</u>. The data contained in this document is for guidance only. Membrapor AG accepts no liability for any consequential losses, injury or damage resulting from the use of this document or from any omissions or errors herein. Customers should test under their own conditions to ensure that the sensors are suitable for their own requirements.