

Volatile Organic Compounds Gas Sensor VOC/M-2000

VOC Gas Sensor in Miniature Housing

Key Features

- Long-life VOC sensor
- No replacement of sensor components

Applications

- Emission Monitoring
- For Portable Gas Detectors

Measurement

Operation Principle	3-Electrode Electrochemical
Nominal Range	0 - 2000 ppm
Maximum Overload	4000 ppm
Inboard Filter	•
Output Signal	Alcohols
	Isopropanol: 230 ± 50 nA/ppm
	Methanol: 250 ± 80 nA/ppm
	Ethanol: 210± 60 nA/ppm
	Aromatic Hydrocarbons
	Benzene: 40 ± 20 nA/ppm
	Organic Acids
	Formic acid: 125 ± 50 nA/ppm
	Unsaturated Hydrocarbons

Rev.: Aug-20

Phone: +41 43 311 72 00 Fax: +41 43 311 72 01 E-Mail: <u>info@membrapor.ch</u> Website: <u>www.membrapor.ch</u> Page 1 of 6

Membrapor AG Birkenweg 2 CH-8304 Wallisellen Switzerland

Performance data recorded at 20 – 25 °C, 30 - 50% RH, 900 - 1100 mbar



	Isobutylene (Reference): 210 ± 50 nA/ppm
	Ethylene: 350 ± 100 nA/ppm
Resolution (Electronics dependent)	< 0.1 ppm
T90 Response Time	< 100 s
Typical Baseline Range (pure air, 20°C)	0.1 ppm to 1.5 ppm ¹⁾
Maximum Zero Shift (+20°C to +40°C)	see Graph
Repeatability	< 2 % of signal
Output Linearity	Linear
Gain (Only applies to 4-Electrode sensors)	-

1) Fresh sensors with bias need 24 - 72 h for stabilization of the baseline.

Rev.: Aug-20

Phone: +41 43 311 72 00 Fax: +41 43 311 72 01 E-Mail: <u>info@membrapor.ch</u> Website: <u>www.membrapor.ch</u> Page 2 of 6

Membrapor AG Birkenweg 2 CH-8304 Wallisellen Switzerland

Performance data recorded at 20 – 25 °C, 30 - 50% RH, 900 - 1100 mbar



Volatile Organic Compounds Gas Sensor VOC/M-2000

Electrical

Rec. Load Resistor	10 - 33 Ω
Bias (V_Sens-V_Ref)	+300 mV
Conformity to RoHS directive	RoHS Compliance
<u>Environmental</u>	
Relative Humidity Range	15 % to 90 % RH non-condensing
Temperature Range	-40 °C to 50 °C
Pressure Range	Atmospheric ± 10%
Pressure Coefficient	N.D.
Humidity Effect	None
<u>Lifetime</u>	
Expected Operation Life	5 years in air
Expected Long Term Output Drift in air	< 2 % signal loss per month
Filter Life	
Storage Life	6 months in container
Rec. Storage Temperature	5°C - 20°C

12 months from date of dispatch

Warranty Period

Rev.: Aug-20

Phone: +41 43 311 72 00 Fax: +41 43 311 72 01 E-Mail: <u>info@membrapor.ch</u> Website: <u>www.membrapor.ch</u> Page 3 of 6

Membrapor AG Birkenweg 2 CH-8304 Wallisellen Switzerland


Performance data recorded at 20 – 25 °C, 30 - 50% RH, 900 - 1100 mbar



Miniature-Size Outline Dimensions



Volatile Organic Compounds Gas Sensor VOC/M-2000

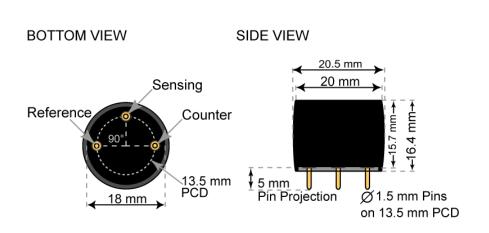

± 0.10 mm

Mechanical

Weight	5.5 g
Orientation	Any
Housing material	Polycarbonate

Rev.: Aug-20	Page 4 of 6
Phone: +41 43 311 72 00 Fax: +41 43 311 72 01 E-Mail: <u>info@membrapor.ch</u> Website: <u>www.membrapor.ch</u>	Membrapor AG Birkenweg 2 CH-8304 Wallisellen Switzerland
Performance data recorded at 20 – 25 °C, 30 - 50% RH, 900 - 1100 mbar	



Volatile Organic Compounds Gas Sensor VOC/M-2000

Cross Sensitivity Data

The table below does not claim to be complete. Interfering gases should not be used for calibration. Please contact Membrapor AG for further support regarding cross sensitivities.

Interfering Gas	Cross-Sens. [%]
СО	60 - 80
H ₂	0
H ₂ S	> 100
NO ₂	< 40

Rev.: Aug-20

Phone: +41 43 311 72 00 Fax: +41 43 311 72 01 E-Mail: <u>info@membrapor.ch</u> Website: <u>www.membrapor.ch</u> Page 5 of 6

Membrapor AG Birkenweg 2 CH-8304 Wallisellen Switzerland

Performance data recorded at 20 – 25 °C, 30 - 50% RH, 900 - 1100 mbar

MEMBRAPOR

Specification Sheet




Volatile Organic Compounds Gas Sensor VOC/M-2000

Temperature dependence

The output of an electrochemical sensor varies with temperature. The graphs below show the temperature-dependent variation of baseline and sensitivity, respectively. The results shown here are raw data (batch average) without any post-processing steps. The sensitivity and baseline are referenced to the signal at 20°C (reference point).

Please note: It is highly recommended to acquire the temperature dependence curves with the whole instrument. The sampling system, the humidity, the electronics and the interaction between the electronics and the sensor have a significant impact on the temperature dependence of the final measurement reading.

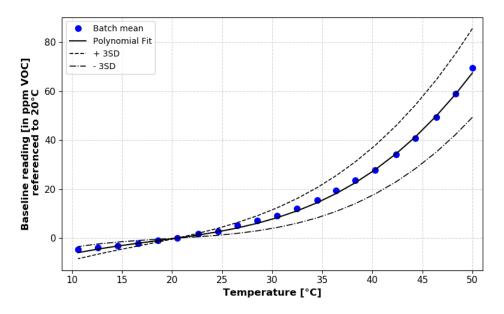

Baseline shifted with respect to reference point at 20°C.

Rev.: Aug-20

Phone: +41 43 311 72 00 Fax: +41 43 311 72 01 E-Mail: <u>info@membrapor.ch</u> Website: <u>www.membrapor.ch</u> Page 6 of 6

Membrapor AG Birkenweg 2 CH-8304 Wallisellen Switzerland

Performance data recorded at 20 – 25 °C, 30 - 50% RH, 900 - 1100 mbar