

User Manual

NaviGuider

Sensor Based Orientation System for UAVs,
ocean gliders, robots and buoys

Table of Contents

1	PRODUCT OVERVIEW	3
1.1	NAVIGUIDER SYSTEM OVERVIEW	4
2	NAVIGUIDER UART VERSION SPECIFICATIONS.....	5
2.1	PERFORMANCE CHARACTERISTICS	5
2.2	ELECTRICAL CHARACTERISTICS	5
3	INTERFACE.....	7
4	OPERATION	8
4.1	RUN MODE.....	8
4.2	NAVIGUIDER BOARD SUPPORTED VIRTUAL SENSORS	12
4.3	VIRTUAL SENSOR AND META EVENT INFORMATION	12
5	MECHANICAL DRAWINGS.....	18


List of Figures

Figure 1-1: NaviGuider Module Reference Schematic	4
Figure 2 PNI 14480 USB-serial evaluation Cable	7
Figure 5-1:NaviGuider	18

List of Tables

Table 2-1: Performance Characteristics	5
Table 2-2: Absolute Maximum Ratings.....	5
Table 2-3: Operating Conditions.....	5
Table 3-1 Communication Format.....	7
Table 3-2: NaviGuider Module Pin Assignments	7
Table 4-1 Summary of Simple Serial Character Commands	9
Table 4-2 Summary of Supported Virtual Sensors and Meta Events.....	12

PRODUCT OVERVIEW

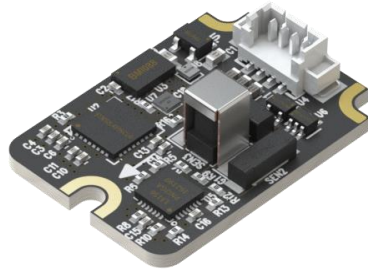

NaviGuider (PNI Part number 14703)



NaviGuider-I²C (PNI Part number 14709)

PNI's NaviGuider module is the *first* complete sensor-based orientation system for UAVs, ocean gliders, robots, and buoys. It incorporates PNI's SENtral-A2 sensor fusion coprocessor, PNI's RM3100 magnetic sensor, an accelerometer, and a gyroscope. The sensor fusion coprocessor comes super-charged with the latest, military grade algorithms, including continuous hard and soft-iron magnetic auto-calibration, and important magnetic anomaly compensation. The module requires **no** external calibration.

The NaviGuider is a panel mountable printed-circuit assembly with a connector for cable interfacing. Its small form factor, UART interface and ASCII protocol makes system integration straightforward. Physical and virtual sensor outputs are available along with meta events to enable even tighter system integration with the host system. For quick evaluation and test, a GUI application can be obtained by contacting support@pnisensor.zendesk.com

For embedded designers, NaviGuider-I²C is available with an I²C interface on a surface-mountable PCBA. Please contact support@pnisensor.zendesk.com for details on the I²C protocol.

NAVIGUIDER SYSTEM OVERVIEW

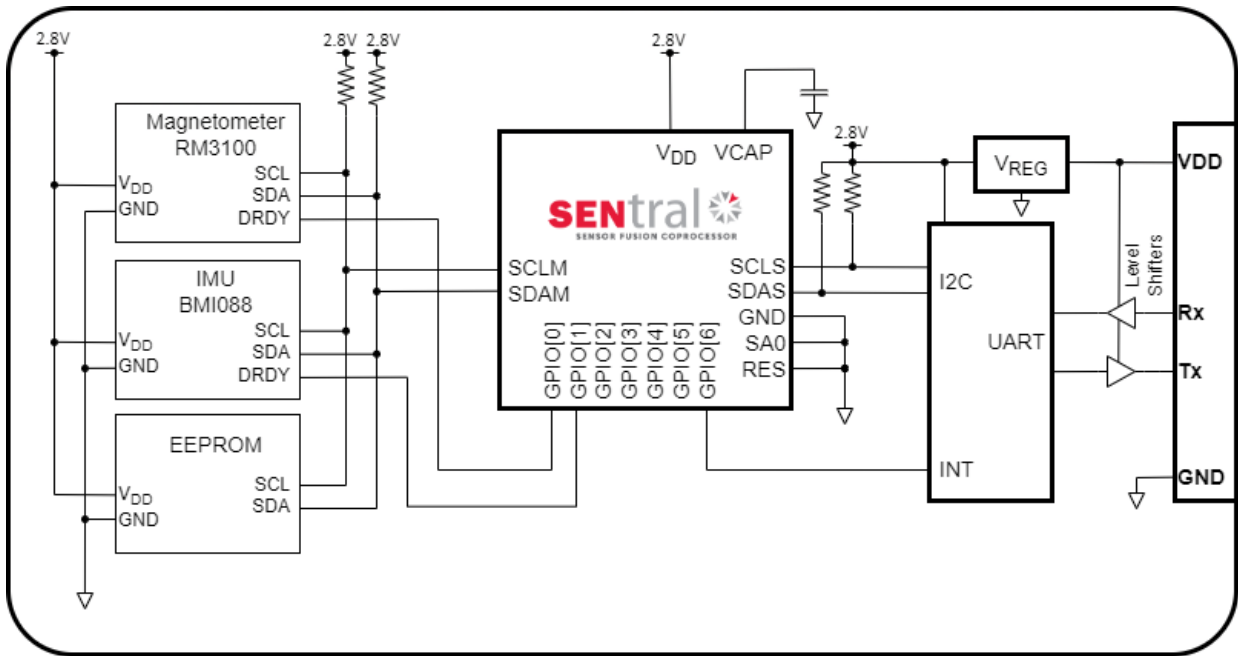


Figure 0-1: NaviGuider Module Block Diagram

The block diagram, above, shows sensors for the NaviGuider UART version. NaviGuider modules incorporate a combination sensor that combines the gyroscope and accelerometer into a single device.

For more information on the SENTral-A2 Motion Processor please contact support@pnisen-sor.zendesk.com

NAVIGUIDER UART VERSION SPECIFICATIONS

PERFORMANCE CHARACTERISTICS

Table 0-1: Performance Characteristics

Parameter	Typical
Heading Accuracy	2° rms
Output Data Rate	200 Hz

ELECTRICAL CHARACTERISTICS

Table 0-2: Absolute Maximum Ratings

Parameter	Symbol	Minimum	Maximum	Units
Supply Voltage	V _{IN}	-0.3	+6	VDC
Storage Temperature	T _{STORE}	-50°	+150°	C

CAUTION:

Stresses beyond those listed above may cause permanent damage to the device. These are stress ratings only. Operation of the device at these or other conditions beyond those indicated in the operational sections of the specifications is not implied.

Table 0-3: Operating Conditions

Parameter	Conditions	Value
V _{IN} Supply Voltage		2.9 to 5.5 VDC ⁽¹⁾
I _{IN} Supply Current	max. sample rate	9.5 mA typical
	Sleep Mode	0.38 mA typical
I _{OH} High-level output current (Tx)	V _{IN} = 3.3 V	-7mA max
	V _{IN} = 5 V	-8mA max
I _{OL} Low-level output current (Tx)	V _{IN} = 3.3 V	7mA max
	V _{IN} = 5 V	8mA max
V _{IH} High-level input voltage (Rx)	V _{IN} = 3 V to 3.3 V	1.39 V min
	V _{IN} = 3.6 V	1.48 V min

	$V_{IN} = 4.5 \text{ V to } 5 \text{ V}$	2.03 V min
	$V_{IN} = 5.5 \text{ V}$	2.11 V min
V_{IL} Low-level input voltage (Rx)	$V_{IN} = 3 \text{ V to } 3.6 \text{ V}$	0.65 V Max
	$V_{IN} = 4.5 \text{ V to } 5.5 \text{ V}$	0.8 V Max
V_{OH} High-level output voltage (Tx)	$V_{IN} = 2.9 \text{ V to } 5.5 \text{ V}$ $I_{OH} = -20\mu\text{A}$	$V_{IN} - 0.1\text{V min}$
	$V_{IN} = 3 \text{ V}$ $I_{OH} = -3\text{mA}$ $I_{OH} = -5.5\text{mA}$	2.7 V min 2.49 V min ⁽²⁾
	$V_{IN} = 3.3 \text{ V}, I_{OH} = -5.5\text{mA}$	2.8 V min
	$V_{IN} = 4.5 \text{ V}, I_{OH} = -4\text{mA}$	4.1V min
	$V_{IN} = 4.5 \text{ V}, I_{OH} = -8\text{mA}$	3.95V min
	$V_{IN} = 5 \text{ V}, I_{OH} = -8\text{mA}$	4.5 V min
V_{OL} Low-level output voltage (Tx)	$V_{IN} = 2.9 \text{ V to } 5.5 \text{ V}$ $I_{OH} = 20\mu\text{A}$	0.1V max
	$V_{IN} = 3 \text{ V}, I_{OH} = 3\text{mA}$	0.15 V max
	$V_{IN} = 3 \text{ V}, I_{OH} = 3\text{mA}$	0.252 V max
	$V_{IN} = 4.5 \text{ V}, I_{OH} = 3\text{mA}$	0.2 V max
	$V_{IN} = 4.5 \text{ V}, I_{OH} = 3\text{mA}$	0.35 V max
T_o Operating Temperature		
Operating Current	Idle (no Sensors Enabled)	12.4 mA
	Rotation Vector (max ODR)	17.8 mA
	Geo-Mag Rot (min ODR)	12.9 mA
	All Sensors (Max ODR)	20.4 mA

TTL-compliant logic levels guaranteed for $V_{IN} = 3.0\text{V to } 5.5\text{V}$ with R_x load $\leq 3\text{mA}$ or $V_{IN} = 3.3\text{V to } 5.5\text{V}$ with loads $\leq 8\text{mA}$. CMOS-compliance is guaranteed the entire V_{IN} voltage range.

High load currents at low V_{IN} voltages may prevent device from producing TTL-compliant voltages.

Table 0-1 Communication Format

Parameter	Value
Communication Interface	TTL/CMOS serial UART
Communication Protocol	ASCII
UART Configuration	115200 Baud 8-bit data 1-stop bit No parity bits

The NaviGuider pin-out is given in Table 0-2. See Table 0-3 for the operating voltage range.

Table 0-2: NaviGuider Module Pin Assignments

Pin Name	Description	Pin#
GND	Ground	1
V _{IN}	Supply Voltage	2
TX	UART Transmit Output	3
RX	UART Receive Input	4

NaviGuider UART mating connector is 4-pin Molex PicoBlade, housing part number 0510210400, or pigtail cable assembly part numbers 218112040X, where X = 0 through 3.

A 1.8 Meter USB-Serial cable, shown in Figure 2 below, is available from PNI Sensor as part number 14480

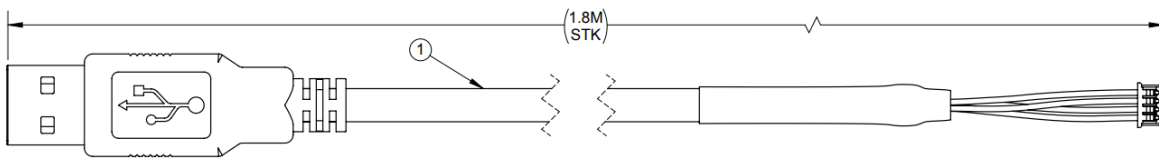


Figure 2 PNI 14480 USB-serial evaluation Cable

OPERATION

The NaviGuider has two distinct modes of execution: Boot Mode, Main Execution Mode.

The Boot Mode is transparent to the user and happens automatically upon power-up, after which the module enters Idle state of the Execution Mode.

RUN MODE

To access the full sensor suite, the device must be in run mode (AKA Run State of the Execution mode). This is achieved by sending the character 'r'. If you are unsure of the current execution state, begin by first sending a Reset command followed by a Run command, i.e. "Rr".

A list of the ASCII Serial commands are given in Table 0-1 on the next page. These are the UART commands used by the NaviGuider modules.

Following that table is Table 0-2 which lists the available virtual sensors and meta events with their respective IDs. The IDs are used with the start command to start and stop specific sensors. The IDs are also used in the non-verbose mode of the output data stream to identify the data packets.


Table 0-1 Summary of Simple Serial Character Commands

Note: Commands are CASE Sensitive!

Char	Description
Configuration and Status	
n	Display sensor information
v	Display Version
M#[CR]	Mounting Options # is limited to 1-16. See Figure 4-1 for specific mounting options
J3	Set module to NED orientation
J4	Set module to ENU orientation (Default)
Sensor Selection and Rates	
s	Start Sensor at given rate Format: s #,#[CR] where: 1 st # = Sensor ID. See Table 0-2 Summary of Supported Virtual Sensors and Meta Events 2 nd # = Data rate (Aggregate data rate should not exceed 1200 Hz) [CR] = carriage return (0x0D) this is one command that does require it.
Display Controls	
m0	Meta event reporting off
m1	Meta event reporting on
m[CR]	Toggle meta event reporting(on/off) Default (On)
D0	sensor Data display off
D1	sensor Data display on
D[CR]	Toggle sensor Data display (on/off) Default (On)
V0	Verbose Mode off
V1	Verbose Mode on
V[CR]	Toggle Verbose Mode (on/off) Default (On)

Additional Controls	
P	Power Down (Low power mode) - Everything is turned low power (~500 uW) until next UART event to wake up.
Additional Controls	
S	Save factory calibration parameters
X	Restart system
J1	Stop autocal
J0	Start autocal
?	Display commands menu
Tests	
B	Run RM3100 Self tests

Figure 0-1: Mounting Options
 Ascending Index from Left to Right, then Top to Bottom
 (Mounting Option #1 is Top Left, #16 is Bottom Right)

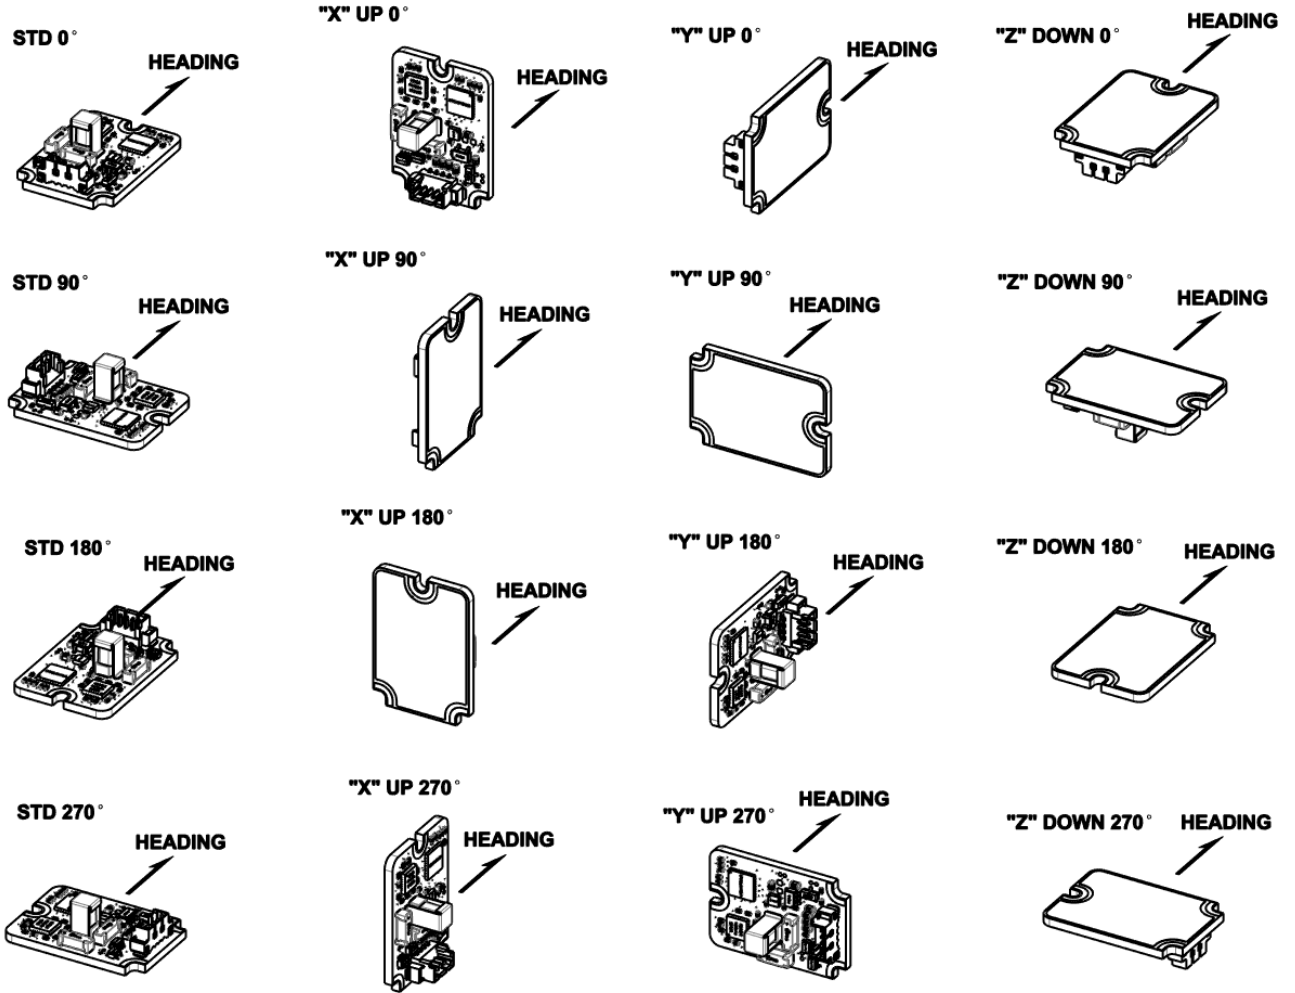

NAVIGUIDER BOARD SUPPORTED VIRTUAL SENSORS

Table 0-2 Summary of Supported Virtual Sensors and Meta Events

Sensor ID	Description	Type
1	Accelerometer (uncalibrated)	Continuous
2	Magnetometer	Continuous
3	Orientation	Continuous
4	Gyroscope (temperature compensated)	Continuous
7	Temperature	On Change
9	Gravity	Continuous
10	Linear Acceleration	Continuous
11	Rotation Vector (9DOF)	Continuous
14	Magnetometer Uncalibrated	Continuous
15	Game Rotation Vector (6DOF accelerometer + gyroscope)	Continuous
16	Gyroscope Uncalibrated	Continuous
17	Significant Motion	One shot
20	Geomagnetic Rotation Vector (6DOF accelerometer + magnetometer)	Continuous
254	Meta Events Used in NAVIGUIDER-A2 UART	
	4	Error
	5	Magnetic Transient
	6	Cal Status Changed
	7	Stillness Changed
	9	Calibration Stable
	15	Self-Test (BIST) Results

VIRTUAL SENSOR AND META EVENT INFORMATION

Listed below are the interface specifications for the most used Virtual Sensors and Meta Events that occur in the host readable FIFO stream. When the host enables these virtual sensors, the Virtual sensors' output data is posted to the host readable FIFO at prescribed rates.

UART Output Format:

Verbose Mode (Off) -future feature

```
Timestamp,SensorID[,Value][,Value]...[,Value] LFCR
```

Verbose Mode (On) -default

```
Timestamp,event name[,Value][,Value]...[,Value] LFCR
```

Example:

Verbose Mode (Off) -future feature

```
246511934, 14, -0.020935, 0.006653, -0.690308, 0.723145, -2.496170 LFCR
```

Verbose Mode (On) -default

```
246511934, Rotation Vector, -0.020935, 0.006653, -0.690308, 0.723145, -2.496170 LFCR
```

Notes:

Each line ends with a Linefeed and Carriage return, (^L_F^C_R).

The timestamp is a Uint32 type that will wrap on overflow. The units are uncalibrated picoseconds

The formats of the Sensor payloads are given in the following section

KEY for the following Sensor and Event listings

SENSOR_TYPE ID#:	This is the SENSOR_TYPE ID value written to ParamIO page 3 to select a particular virtual sensor.
Sample_Rate:	A zero sample rate disables the virtual sensor.
Reporting Type:	Wake-up type Virtual sensors will interrupt the host even in AP_Suspend mode Continuous mode will report data to the host continuously at the sample rate ON-Change mode will only report data to the host if the data value(s) have changed.
Payload size:	Number of Comma Separated Values not including the Time Stamp and SENSOR_TYPE ID in each report sentence sent to the host interface FIFO. All payloads end with a Carriage Return [CR], 0X0D.
Payload Values:	The range and type of each data value is listed along with a short description
Description:	Describes the operation of this virtual sensor or event

Accelerometer

SENSOR_TYPE ID#:	1
Sample Rate:	Set by user, 0-400Hz
Reporting Type:	Continuous
Payload size:	4
Payload Values:	X, Y, Z, Accuracy
Description:	Acceleration sensor Values X, Y, and Z units are m/s ²

Magnetometer

SENSOR_TYPE ID#:	2
Sample Rate:	Set by user, 0-125Hz
Reporting Type:	Continuous
Payload size:	4
Payload Values:	X, Y, Z, Accuracy
Description:	Magnetometer sensor X, Y, and Z values are in micro-Tesla (uT)

Orientation

SENSOR_TYPE ID#:	3
Sample Rate:	0-400Hz
Reporting Type:	Continuous
Payload size:	4
Payload Values:	Yaw, Pitch, Roll, Accuracy
Description:	A 9DOF calculation from Accel, Mag and Gyro sensors Values X, Y, and Z are in degrees

Gyroscope

SENSOR_TYPE ID#:	4
Sample Rate:	Set by user, 0-400Hz
Reporting Type:	Continuous
Payload size:	4
Payload Values:	X, Y, Z, Accuracy
Description:	Device specific output data from Gyroscope sensor X, Y, & Z units are radians per second (rad/s)

Temperature

SENSOR_TYPE ID#:	7
Sample Rate:	0-50Hz
Reporting Type:	Continuous
Payload size:	1
Payload Values:	Temperature (°C)
Description:	Output data from Temperature sensor

Acceleration components (2 types)

SENSOR_TYPE ID#:	9	Gravity
	10	Linear Acceleration
Sample Rate:	0-400Hz	
Reporting Type:	Continuous	
Payload size:	5	
Payload Values:	X, Y, Z, Accuracy	
Description:	Gravity and linear acceleration components of acceleration sensor Values X, Y, and Z units are m/s ²	

Quaternions (3 types)

SENSOR_TYPE ID#:	11	Rotation Vector (9-DOF Accel/Mag/Gyro)
	15	Game Rotation (6-DOF Accel/Gyro)
	20	Geo-magnetic Rotation (6-DOF Mag/Accel)
Sample Rate:	0-400Hz	(Geo-magnetic Rotation maximum rate is 125Hz)
Reporting Type:	Continuous	
Payload size:	5	
Payload Values:	Q _x , Q _y , Q _z , Q _w , Accuracy	
Description:	Quaternion Output data from Rotation Vector Virtual Sensors. A rotation vector sensor reports the orientation of the device relative to the East-North-Up (ENU) coordinates frame. The ENU coordinate system is defined as a direct orthonormal basis where:	

X points east and is tangential to the ground.

Y points north and is tangential to the ground.

Z points towards the sky and is perpendicular to the ground.

Meta Event


SENSOR_TYPE ID#: 254

Reporting Type: On Change

Payload size: 3

Payload Values			
Value 1 – Meta Event type ID		Value 2	Value 3
2	Sample Rate Changed	Sensor ID	0
3	Power Mode Changed	Sensor ID	0
4	Error	Error Register	Debug State
5	Magnetic Transient	1 = transient detected 0 = no transient detected	0
6	Cal Status Changed	Cal Status Value	Trans Component
7	Stillness Changed	1 = now still 0 = no longer still	0
9	Calibration Stable	1 = stable 0 = not stable	0
11	Sensor Error	Sensor ID	Sensor status bits
12	FIFO Overflow	Loss count LSB	Loss count MSB
13	Dynamic Range Changed	Sensor ID	0
14	FIFO Watermark	Bytes remaining	0
15	Self-Test (BIST) Results	Sensor ID	Test results 0 = pass
16	Initialized	RAM version LSB	RAM version MSB
17	Transfer Cause	0	0

Figure 0-1:NaviGuider

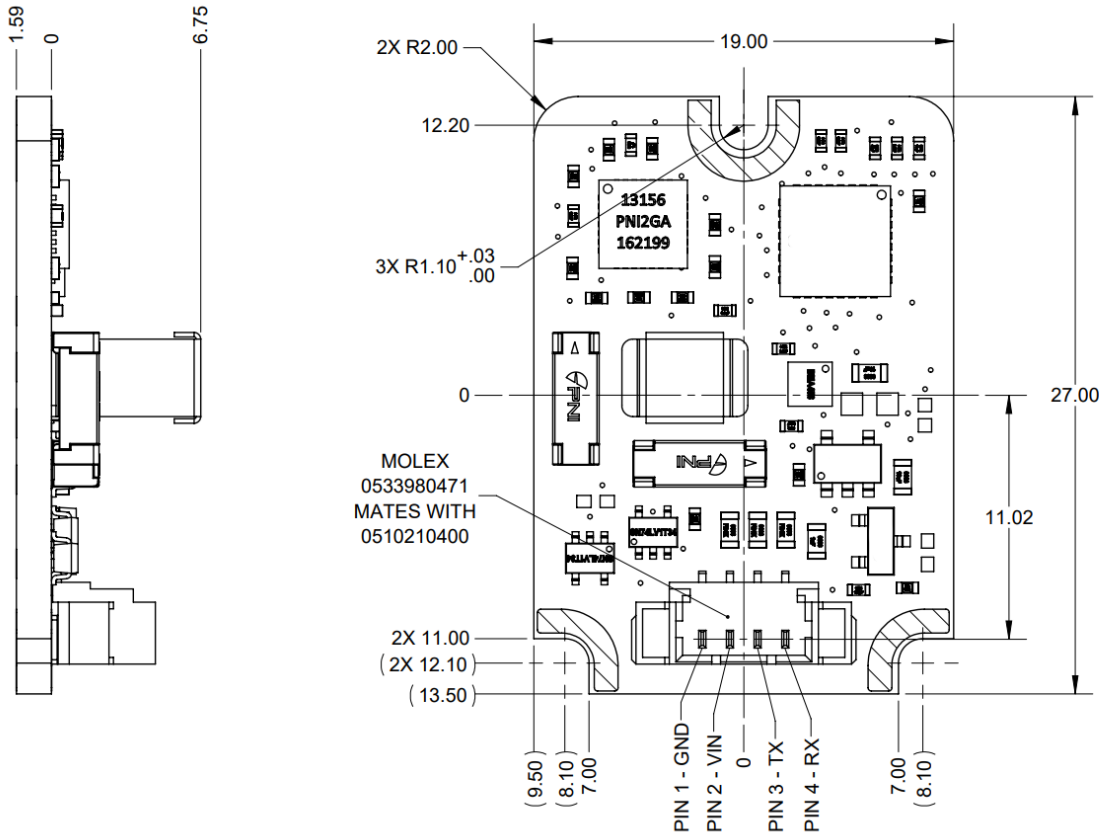

©2022 PNI Sensor. All Rights Reserved.

Reproduction, adaptation, or translation without prior written permission is prohibited, except as allowed under copyright laws.

Revised March 2016: for the most recent version of this document visit our website at www.pnicorp.com

PNI Sensor
2331 Circadian Way
Santa Rosa, CA 95407, USA
Tel: (707) 566-2260
Fax: (707) 566-2261

Warranty and Limitation of Liability. PNI Sensor ("PNI") manufactures its Products from parts and components that are new or equivalent to new in performance. PNI warrants that each Product to be delivered hereunder, if properly used, will, for ninety (90) days following the date of shipment unless a different warranty time period for such Product is specified: (i) in PNI's Price List in effect at time of order acceptance; or (ii) on PNI's web site (www.pnicorp.com) at time of order acceptance, be free from defects in material and workmanship and will operate in accordance with PNI's published specifications and documentation for the Product in effect at time of order. PNI will make no changes to the specifications or manufacturing processes that affect form, fit, or function of the Product without written notice to the Customer, however, PNI may at any time, without such notice, make minor changes to specifications or manufacturing processes that do not affect the form, fit, or function of the Product. This warranty will be void if the Products' serial number, or other identification marks have been defaced, damaged, or removed. This warranty does not cover wear and tear due to normal use, or damage to the Product as the result of improper usage, neglect of care, alteration, accident, or unauthorized repair.

THE ABOVE WARRANTY IS IN LIEU OF ANY OTHER WARRANTY, WHETHER EXPRESS, IMPLIED, OR STATUTORY, INCLUDING, BUT NOT LIMITED TO, ANY WARRANTY OF MERCHANTABILITY, FITNESS FOR ANY PARTICULAR PURPOSE, OR ANY WARRANTY OTHERWISE ARISING OUT OF ANY PROPOSAL, SPECIFICATION, OR SAMPLE. PNI NEITHER ASSUMES NOR AUTHORIZES ANY PERSON TO ASSUME FOR IT ANY OTHER LIABILITY.

If any Product furnished hereunder fails to conform to the above warranty, Customer's sole and exclusive remedy and PNI's sole and exclusive liability will be, at PNI's option, to repair, replace, or credit Customer's account with an amount equal to the price paid for any such Product which fails during the applicable warranty period provided that (i) Customer promptly notifies PNI in writing that such Product is defective and furnishes an explanation of the deficiency; (ii) such Product is returned to PNI's service facility at Customer's risk and expense; and (iii) PNI is satisfied that claimed deficiencies exist and were not caused by accident, misuse, neglect, alteration, repair, improper installation, or improper testing. If a Product is defective, transportation charges for the return of the Product to Customer within the United States and Canada will be paid by PNI. For all other locations, the warranty excludes all costs of shipping, customs clearance, and other related charges. PNI will have a reasonable time to make repairs or to replace the Product or to credit Customer's account. PNI warrants any such repaired or replacement Product to be free from defects in material and workmanship on the same terms as the Product originally purchased.

Except for the breach of warranty remedies set forth herein, or for personal injury, PNI shall have no liability for any indirect or speculative damages (including, but not limited to, consequential, incidental, punitive and special damages) relating to the use of or inability to use this Product, whether arising out of contract, negligence, tort, or under any warranty theory, or for infringement of any other party's intellectual property rights, irrespective of whether PNI had advance notice of the possibility of any such damages, including, but not limited to, loss of use, revenue or profit. In no event shall PNI's total liability for all claims regarding a Product exceed the price paid for the Product. PNI neither assumes nor authorizes any person to assume for it any other liabilities.

Some states and provinces do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights and you may have other rights that vary by state or province.

Revision Control Block

<u>Revision</u>	<u>Description of Change</u>	<u>Effective Date</u>	<u>Approval</u>
V1.0	Released (Preliminary-C)	11/29/2022	BO